

HOW TO ADJUST THE AUTO Z

The **AUTO Z** parameter is a setting that permit to regulate the space there is between the tip and the tag between one character and another, during the engraving process.

To do this operation the system must be opened, if the system is closed, read "INTRODUCTION" instructions.


If the parameter is not correctly set, the symptom is one of these two:

- there are stripes, on the tag, between one character and another (FIRST CASE)
- the tip does not touch the tag during the engraving process (SECOND CASE).


Follow these instructions when one of these two problems are shown.

If the machine is switched off, switch it on and, in the home page, press 

This screen will appear:

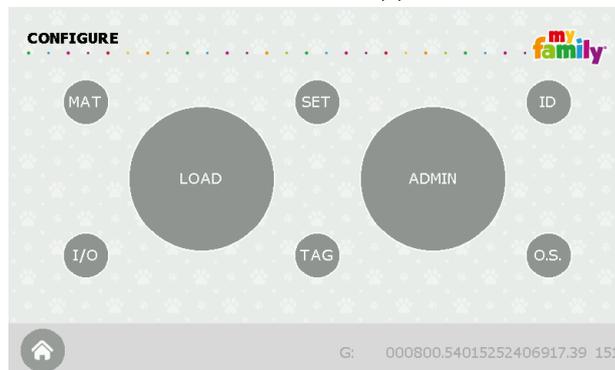

Press  button and this screen will appear:

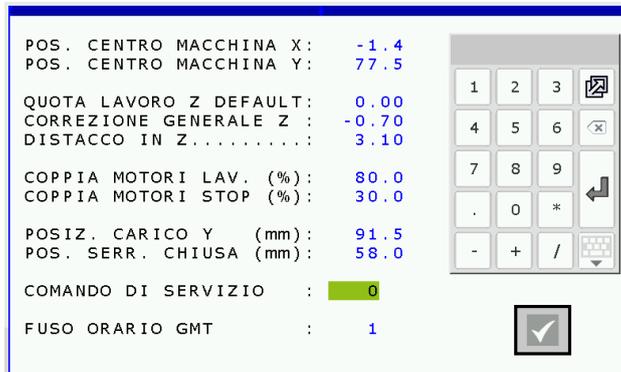

The interested set menu is the 5th line: **DISTACCO IN Z**

FIRST CASE → If there are stripes, on the tag, between one character and another:

SOLUTION → **INCREASE** the value (of some tenths) written in the "DISTACCO IN Z" field and press 

SECOND CASE → If the tip does not touch the tag during the engraving process:

SOLUTION → **DECREASE** the value (of some tenths) and press 

Press the  to come back to the home page and make a test.

When the required modifications are done, **REMEMBER TO CLOSE THE SYSTEM.**

To close the system, read "INTRODUCTION" instructions.

This process is now finished!